




BMW R1200CL
(Part No.TR8011 – Hole set '1')
Installation Instructions

Use thread lock on all bolts.

Bolt hitch to the bottom of saddle bags. Use bolts supplied.

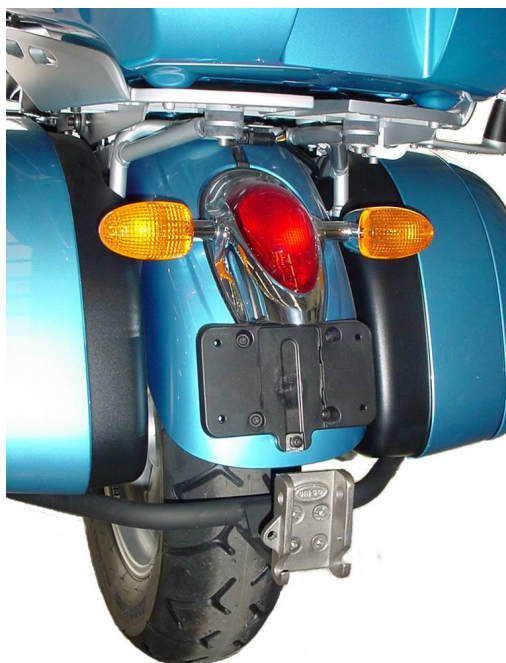

Tighten all bolts.
Attach rolling chassis.
Check alignment and make adjustments through draw bar bolts.
Make sure that you check every bolt before you ride.

You have successfully mounted your hitch